



This control kit includes a removable sealed cap for protecting the adjustment screw. It is like the R Control but without the lockwire.

- NOTES:**
- Release pressure within the valve.
  - Set valve to minimum adjustment.
  - Remove original wire stop ring (where applicable) and locknut.
  - With face seal in groove, thread locknut onto adjust screw until it bottoms out on hex body.
  - Adjust valve to desired setting and install wire stop ring (where applicable).
  - Install cap onto locknut, ensuring second locknut seal is in groove below thread. Tighten to 108 lbf in. (12 Nm).