



SUN gage line fuses protect systems from loss of oil if a gage or signal line breaks. If an object hits the gage or the fuse and breaks off the hex of the fuse, the line fuse will continue to perform its function because the working parts are located inside the port. The flow required to actuate the gage line fuse is 1.0 gpm (4 L/min).